

Contents



1 x Camcorder



1 x Lens Cap



1 x mini-USB Cable



1 x Remote Control Wrist Band



1 x Carrying Bag



1 x Wrist Strap



1 x Surfing Holder



1 x Head Strap

 


1 x Helmet Mount

Safety

- Do not point the camera directly at the sun as this may damage the camera.
- Make sure the side door locks into place to ensure that water cannot get inside the camera.
- Do not submerge more than 16ft / 5m deep.
- Do not use in temperatures colder than -4°F / -20°C or warmer than 104°F / 40°C.
- Do not disassemble the camera.
- Do not look at the laser or point it at people's eyes.

Controls Overview

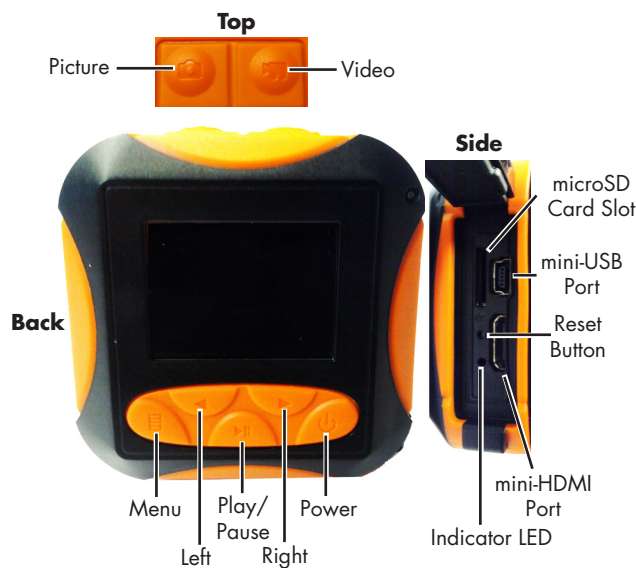

Troubleshooting

Problem	Solution
Camera fails to start	<ul style="list-style-type: none"> • The camera battery is discharged. Charge the camera. • The camera has encountered an error. Press the Reset button.
Camera does not record; says "Card Full"	<ul style="list-style-type: none"> • The microSD card is full. Delete the files saved on the microSD card or insert a fresh microSD card. Note that if you are deleting files from the microSD card on a Mac, you must empty the Trash to delete.
Camera does not record; says "No Card"	<ul style="list-style-type: none"> • microSD card has not been inserted. A microSD card (not included) is required for recording.
Device is not recognized by computer	<ul style="list-style-type: none"> • If red LED is on, camera is charging. Press and hold the power button to enter USB drive mode. • Mini-USB cable is broken. Replace the cable. • USB port is broken. Try a different USB port.
Can only see Videos or Pictures in Playback Mode	<ul style="list-style-type: none"> • Press the Picture button to select either videos or pictures.
Can not exit Playback Mode	<ul style="list-style-type: none"> • Press the Video button to exit.

**FOR SUPPORT AND INFORMATION,
VISIT WWW.LOREXTECHNOLOGY.COM**

Copyright © 2012 Lorex Technologies Inc.

As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE All trademarks belong to their respective owners. No claim is made to the exclusive right to use the trademarks listed, other than the trademarks owned by Lorex Technology Inc.



**WATERPROOF HIGH DEFINITION
VIDEO CAMCORDER**

 
Quick Start Guide
English Version 1.0




ACTIVE
LSC004

Getting Started

1. Open the side door.
2. Connect the mini-USB cable to the camera. Connect the other end to your computer.

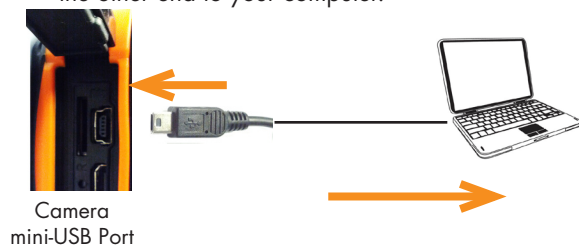

 3. Charge the camera for **5 hours** to fully charge.
4. Disconnect the USB cable from the camera and insert a microSD card (not included) into the camera and push it down until it clicks into place.

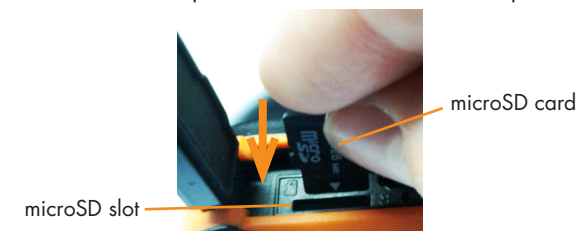


NOTE: The camera can support microSD cards up to a maximum size of 32GB.

5. Close the side door of the camera. Make sure it locks into place to ensure a waterproof seal.



 6. Press and hold the **Power** button to turn on the camera.

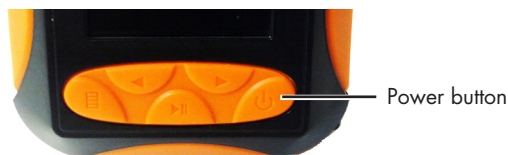

7. Press the **Video** button on the top of the camera to start recording. Recording time appears at the bottom of the screen. Press it again to stop recording.

 
OR

Press the **Picture** button to take a picture.



Remote Control

A remote control with a wrist strap is included for easier control of the camera, especially while the camera is mounted to a helmet or surf board.

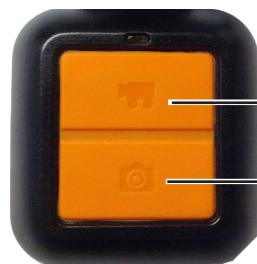

NOTE: When LCD screen is off, first press will turn on the LCD screen but not start recording or take a picture.

Playback Mode


Use Playback Mode to view your pictures and videos directly on the camera, and delete the ones you don't want to free space on your microSD card.

To access Playback:

1. Press **▶ ||** to open Playback Mode.



 2. Press **◀ ▶** to select the video or picture you want to view, and press the **Picture** button to change between Videos and Pictures.

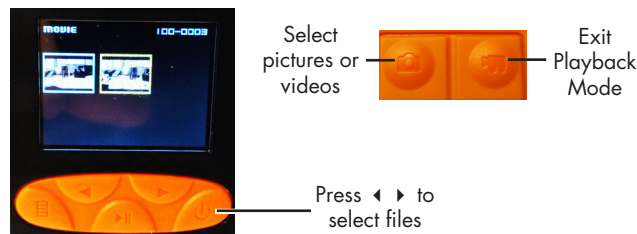

3. Press **▶ ||** to open a video or picture. Press again to start playing a video.
4. Press **Menu** to close the currently selected video or picture. Press the **Video** button to exit Playback Mode.

To delete files:


1. In Playback Mode, press **◀ ▶** to highlight the video or picture you want to delete and press **Menu**.
2. Press **◀ ▶** to select **Yes** and then press **▶ ||** to delete.

System Requirements

- **PC:** Windows 7
- **Mac:** OS 10.5 or higher
- Minimum 10GB free hard drive space to save recordings

Accessing/Saving Pictures and Videos on your Computer

 1. Connect the mini-USB cable to the camera and connect the other end to your computer. The computer will recognize the camera and automatically install drivers.
2. **Windows:** An Autorun window appears. Click **Open folder to view files**. If Autorun does not appear, open Computer and double-click **Removable Disk**.

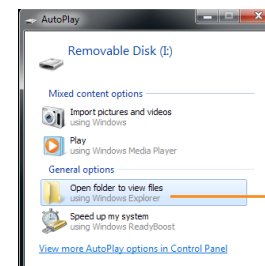

Autorun window

OR

Mac: Double-click the removable disk folder on the Desktop.



Removable disk folder

NOTE: If the camera does not appear and the Indicator LED is red, the camera is charging. Press and hold the Power button to enter USB drive mode.

3. Double-click the **DCIM** folder then the **100MEDIA** folder to access your videos or pictures.
4. Double-click videos or pictures to open. Copy videos or pictures to a folder on your computer to save them to your hard drive.

NOTE: Your videos are saved in .mp4 format and pictures are saved in .jpg.