

13.3" LED MONITOR

Instruction Manual

English Version 2.0



IMPORTANT INSTRUCTIONS

SAFETY INSTRUCTIONS


⚠ Warning – To reduce the risk of fire, electric shock, or serious personal injury:

- Do not use this product near water; e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or the like.
- Situate this product away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Operate the product only with the supplied power adapter. Route power cords so they are not likely to be stepped on, paying particular attention to the power cords and power outlets.
- Clean the product only as recommended by the manufacturer (see the “Maintenance” section for details). Unplug the power cord from the wall outlet before cleaning.
- Unplug the power cord from the wall outlet when left unused for an extended period.
- Prevent objects/liquids from falling or spilling on the monitor.
- Do not operate this product under the following conditions:
 - When the power-supply cord or plug is damaged.
 - If liquid has been spilled into or objects have fallen into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate when used according to the operation instructions.
 - If the product has been dropped or damaged in any way.
- Do not attempt to service the product.
- Do not overload wall outlets, extension cords, or integral convenience receptacles.

⚠ CAUTION – To reduce the risk of personal injury or product/proper damage:

- Do not subject the product to violent shocks, extreme temperatures, or lengthy periods of direct sunlight.
- Keep the product away from magnetic objects, motors, and transformers.
- Do not use outdoors in inclement weather.

BASIC CONNECTION

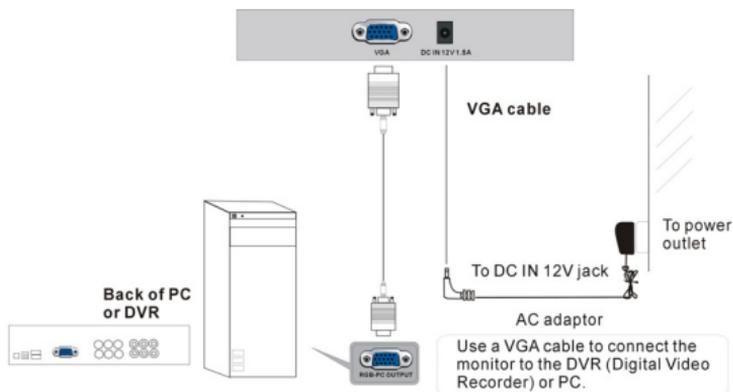

GENERAL PARTS AND OPERATIONS



1. AUTO button - Press this button to automatically adjust the screen display; in menu setting page, press this button to return to previous menu page.

2. MENU button - Press this button to enter the menu setting page.

3. [-] button - Press this button to enter CONTRAST setting page directly; in menu setting page, press [-] to move left or up.

4. [+] button - Press this button to enter BRIGHTNESS setting page directly. Within the menu, press [+] to move right or down.

5. POWER button - Press this button to power ON/OFF the unit.

6. POWER indicator - Glows red to indicate the monitor is in standby mode. Glows green to indicate the monitor is powered on.

MENU OPERATIONS

Press the **MENU** button to enter the menu setting page as shown below:




- Use the [-] or [+] button on the unit to select submenus and press the [MENU] button to enter the submenu. (In this submenu page, you can press the [-] or [+] button to select different submenu page as desired.)
- Press the [MENU] button again to enter next menu setting page you select. Press the [-] or [+] button to select different items as desired. Press the [MENU] button to confirm, then press [+] or [-] button to adjust the desired option.
- Press the [AUTO] button to return to a previous menu page.

1. PICTURE



- Press [-] or [+] button to select BRIGHTNESS, CONTRAST or GAMMA and press [MENU] button to confirm, then press [+] or [-] button to adjust.
- The BRIGHTNESS/CONTRAST can be adjusted from 0-100.
- The GAMMA can be adjusted from -50 to 50.


2. COLOR

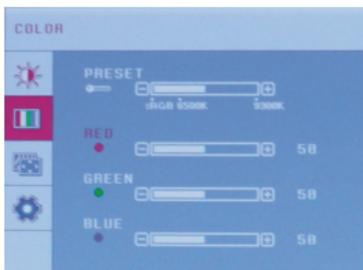

- Press [-] or [+] button to select PRESET, RED, GREEN or BLUE and press [MENU] button to confirm, then press [+] or [-] to adjust.
- The RED/GREEN/BLUE can be adjusted from 0-100.

NOTE: The PRESET item is used to set the screen color display in order to accord with the RGB standard.

3. TRACKING

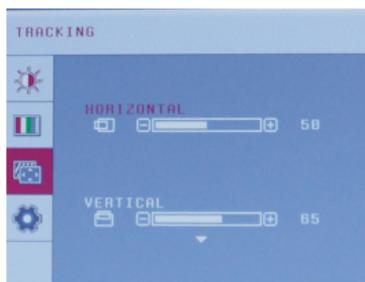

3.1 HORIZONTAL

- This item is used to move the screen display to the left or right.
- The HORIZONTAL can be adjusted from 0-100.


3.2 VERTICAL

- This item is used to move the screen display up or down.
- The VERTICAL can be adjusted from 0-100.

3.3 CLOCK/PHASE/SHARPNESS

- Press [-] or [+] button to select CLOCK, PHASE or SHARPNESS and press [MENU] button to confirm, then press [+] or [-] button to adjust.
- The CLOCK/PHASE can be adjusted from 0-100.
- The SHARPNESS can be adjusted from 0-10.

4. SETUP

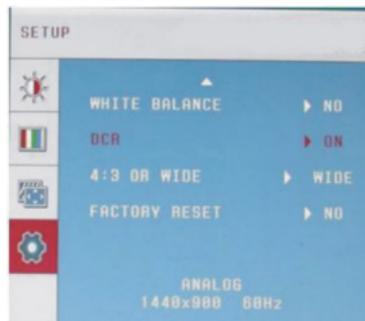

4.1 LANGUAGE

This item is used to set the OSD language. In this unit , you can set the language to English or other languages.

4.2 OSD POSITION

- This item is used to set the OSD menu position on the screen.
- Adjust the HORIZONTAL/VERTICAL item to move the OSD menu to left or right / up or down.
- The HORIZONTAL/VERTICAL can be adjusted from 0-100.

4.3 WHITE BALANCE

- Set the white balance to NO or YES.

4.4 DCR (Dynamic Contrast Ratio)

- Set the DCR item to ON or OFF.

4.5 4:3 OR WIDE

- Set the screen display mode to 4:3/WIDE.

4.6 FACTORY RESET

- Used to reset monitor to factory settings. (Excluding the OSD LANGUAGE.)

MAINTENANCE

- Be sure to press POWER to set the player to the standby mode and disconnect the AC adaptor before maintaining the monitor.
- Wipe the monitor with a dry, soft cloth.
- If the surfaces are extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzene, thinner, cleaning fluid or other chemicals. And do not use compressed air to remove dust.

SPECIFICATIONS

1. Display Device: 13.3 inch color TFT LED
2. Resolution: 1366 (H)*768 (V)
3. Dots Distance: 0.2148(H) X 0.2148(V)mm
4. Visible Range: 293.42(H) X164.97(V)mm
5. Power Source: AC adaptor (normal: DC 12V $\overline{\text{---}}$ 800mA)
6. Power Consumption: 9.6W
7. Operation Temperature : -5°C to +45°C.
8. Measurement: 335(L) X 285(W) X 35(D) mm
9. Weight: Approx. 926g

Specifications are subject to change without notice.

ACCESSORIES

Instruction manual.....	1
15 pin VGA cable.....	1
AC adaptor.....	1