


## Lorex Cirrus: Playback

Play back recorded video using the Lorex Cirrus app.

### To play back recorded video:


1. Launch the **Lorex Cirrus** app.
2. Tap , then tap **Playback**.
3. Set search options for playback:
  - a. Tap a recorder to reveal available channels.
  - b. Tap channels to include in search.
  - c. Tap a date from the calendar to search for recordings from. Dates with recordings available are marked with a red dot.

**NOTE:** Tap  to filter recordings by type and resolution.
4. Tap **Play** to begin playback.

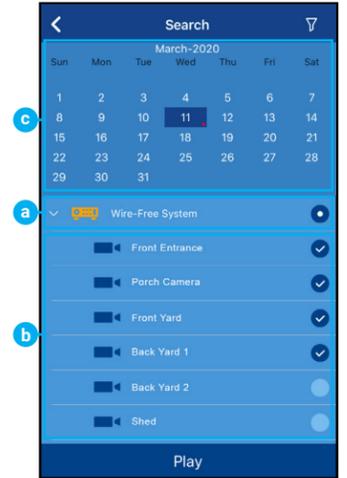

### Playback Controls:

You can use playback mode in portrait or landscape mode. Landscape mode is shown below:

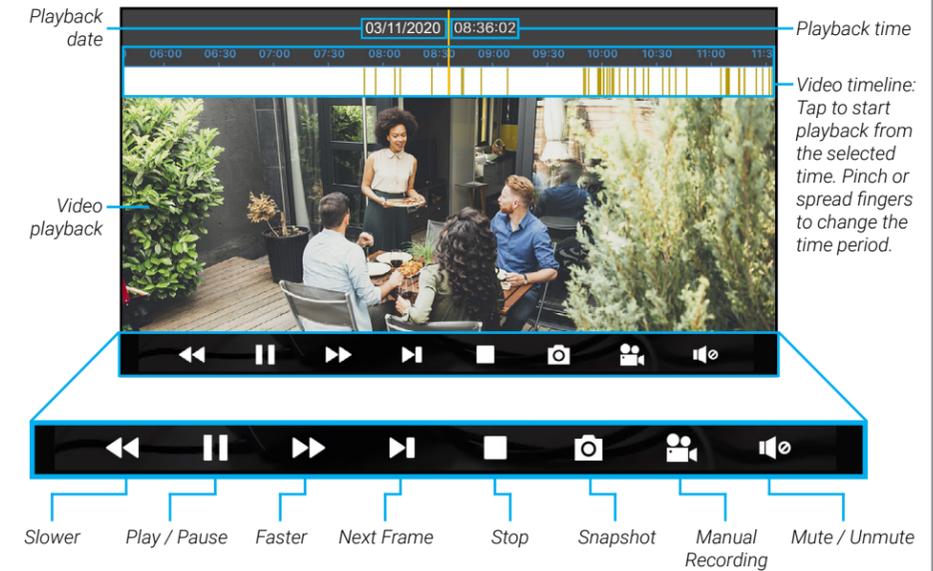

## STOP Before You Start

- Upgrade your recorder firmware and mobile app to the latest versions.
- Please note that an upload speed of 3.5Mbps is required for remote video streaming. Up to 3 devices may connect to the system at the same time.
- Ensure you have completed initial setup of the Lorex Cirrus app and the recorder as detailed in the **Quick Connection Guide**.


### Lorex Cirrus: App Overview

### Lorex Cirrus: Camera Settings

Change camera settings using the Lorex Cirrus app.

#### To change camera settings:

1. Launch the **Lorex Cirrus** app.
2. Tap a channel in Live View to select it.
3. Tap  to open settings for the selected channel.
4. Configure the following as needed:
  - a. **Channel Name:** Enter a name of your choice for the channel (e.g., *Porch Camera*).
  - b. **Record Length:** Set the recording length when motion is detected.
  - c. **Video Resolution:** Set **720p** or **1080p** recording.
  - d. **Motion Settings:** Configure the motion detection settings per channel.
  - e. **Recording Schedule:** Set a schedule for video recording at certain times throughout the week.
  - f. **Audio:** Tap to mute / unmute.
5. Tap **SAVE** to save settings.

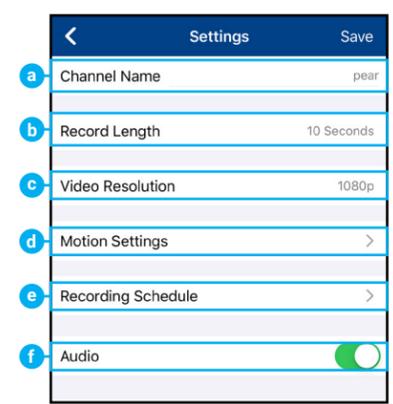

### Lorex Cirrus: Device Settings


Change recorder name and format storage using the Lorex Cirrus app.

#### To change device settings:

1. Launch the **Lorex Cirrus** app.
2. Tap a channel on the device you want to edit from Live View.
3. Tap , then tap **Settings**.
4. Configure the following as needed:
  - a. **Device Name:** Enter a name of your choice for the recorder (e.g., *Wire-Free System*).
  - b. **Format:** Tap to select a storage device (hard drive or microSD card) to format. Tap **Format** to confirm the selected device and begin formatting.
 

**IMPORTANT:** Formatting a storage device will erase all recordings and snapshots. This step cannot be undone.

**NOTE:** Only the admin user can format memory.
5. Tap **Save** to save settings.




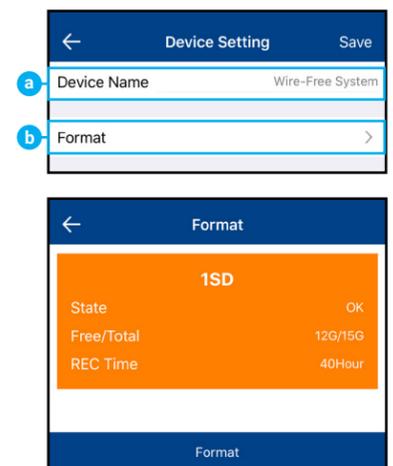


## Recorder: Full Setup

The recorder setup detailed in the **Quick Connection Guide** is a simplified setup. In order to access features using the recorder interface, you must complete the full setup detailed below.

### To set up the recorder:

1. Connect the recorder to your router using the included Ethernet cable.
2. Connect the included mouse to the Mouse / Backup USB port.
3. Connect a monitor (not included) to the HDMI port of the recorder with the included HDMI cable.
4. Connect the included power adapter to the recorder. Wait a few minutes for the system to start up.

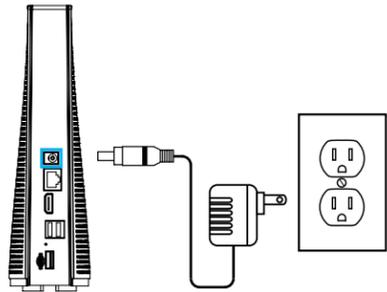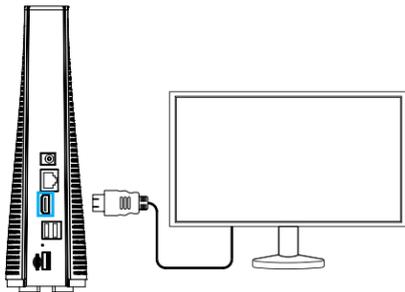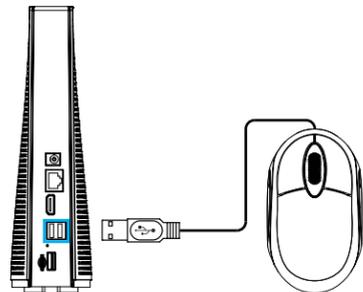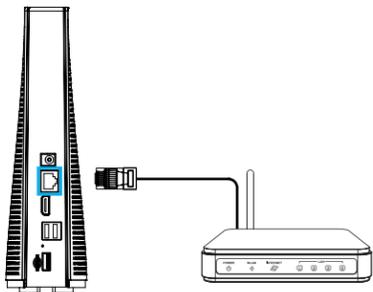

## Recorder: Initial Setup Wizard

For users who wish to use the recorder's interface rather than connecting to the system using the Lorex Cirrus app, you will have to complete the Recorder Setup Wizard to confirm the correct date and time for the system.

### To complete the setup wizard:

1. Log in using the system user name (default: **admin**) and your new, secure password you recorded on the **Quick Connection Guide**.

2. The Setup Wizard launches. Click **Next** to begin.




3. Click the arrow keys to select a language for the on-screen display. Click **Next** to confirm.



4. Click the arrow keys to select your region. Click **Next** to confirm.



5. Enter the date and time:

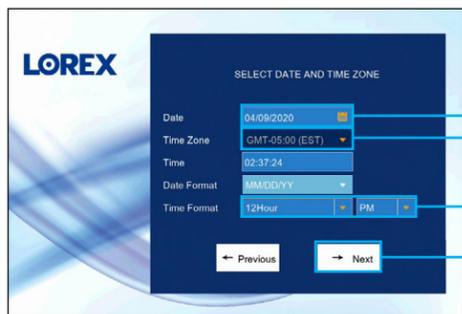

Click to select the correct date from the calendar.

Select the correct time zone from the dropdown.

Select a time format from the dropdown. For **12Hour** format, select either **AM** or **PM** from the second dropdown.

Click **Next** to confirm.

6. Review the information you have set for the recorder. Click **Accept** to confirm.

## Recorder: Quick Menu

Right-click anywhere on the live viewing screen to open the Quick Menu.

- Main Menu** — Open the Main Menu.
- Multi View** — Select camera / live display view.
- Playback** — Search for and play back recordings.
- Backup** — Back up video recordings or snapshots to a USB flash drive (not included).

## Recorder: Using the Mouse

### 1. LEFT-CLICK:

- **During split-screen display mode:** Double-click an individual channel to view it in full-screen. Double-click again to return to the split-screen display mode.
- **While navigating menus:** Click to open a menu option.

### 2. RIGHT-CLICK:

- **During live view:** Right-click anywhere on the screen to open the Quick Menu.
- **While navigating menus:** Right-click to exit menus.

### 3. SCROLL WHEEL:

- **While navigating menus:** Scroll to move up / down through the menu content.



**NOTE:** In live view, hover the mouse cursor over the top of the screen to open the Navigation Bar. Move the mouse cursor away from the top of the screen to close the Navigation Bar.

## Recorder: Search and Playback

Search for and play back video recordings on the DVR.

### To play back recorded video:

1. From live view, right-click and then click **Playback**.
2. Log in using the system user name (default: **admin**) and your new, secure password you recorded on the **Quick Connection Guide**.
3. Use the calendar on the left-side of the screen to select the date to playback.
4. Check off the channels you would like to search for recordings from on the left side of the screen.
5. Click to search for recordings.
6. Search results appear as thumbnails. Double-click any recording to begin video playback.




## Recorder: Backup

Back up video recordings to a USB flash drive (not included).

### To back up recorded video:

1. Insert a USB flash drive (not included) into one of the USB ports marked **Mouse / Backup** on the back of the recorder.
- NOTE:** It is recommended to format USB flash drives prior to using them with your wire-free system.
2. From live view, right-click and then click **Backup**.
3. Log in using the system user name (default: **admin**) and your new, secure password you recorded on the **Quick Connection Guide**.
4. Configure the following:

- Date:** Enter the date to search for recordings from.
- Time:** Enter a start and end time for your search.
- Channel / Type:** Select the channel and recording type to search for, or select All to browse all channels and recording types.
- Search / Quick Backup:** Click Search to show all recordings that fit your search criteria, or click Quick Backup to back up all recordings that fit the search criteria.

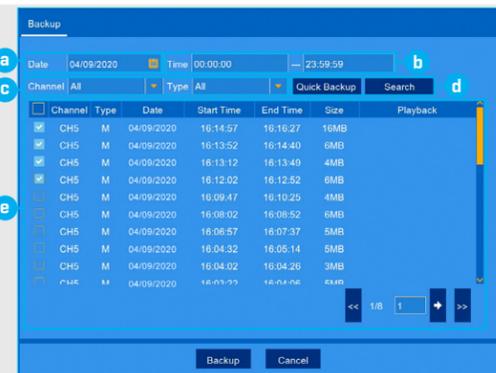

- (Not applicable for Quick Backup)* Recordings that fit the search are shown on screen. Check recordings you want to back up, then click **Backup**.

5. The **Backup Type** screen appears. Select a filetype for your backup files, then click **Save**.
6. The USB flash drive contents are shown on screen. Navigate to the location you want to save the backup files in, then click **OK** to begin the back up. Progress is shown on screen.

**NOTE:** Do not disconnect the USB flash drive until the backup is complete.