

WIRELESS SECURITY CAMERA WITH AUDIO LW2277 QUICK START GUIDE

Getting Started



This system comes with the following components:


- 1x wireless camera
- 1x wireless receiver
- 1x antenna for camera
- 1x antenna for receiver
- 2x power adapters (for camera and receiver)
- 1x RCA-to-BNC adapter
- 1x Allen key
- 1x camera mounting kit
- 1x double-sided tape for receiver
- 1x Instruction Manual

Installation Tips

- Before you permanently install your camera(s):
 - Plan where and how they will be positioned.
 - Determine where you will route the cable that connects the camera to the power adapter.
 - Verify the camera's performance by observing the image on a monitor when the camera is positioned where it will be permanently installed.
- Avoid installing the camera in a location where the wireless signal must pass through cement, concrete, or metal structures. This will reduce the transmission range.

A. Installing the Camera

- 1 Mount the camera to the wall or ceiling using the included screws. Use the included anchors as needed.

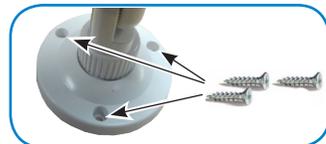


! For outdoor use, installation in a sheltered location is recommended.

NOTE:

If you run the cables along the wall / ceiling, you must run the cable through the cable notch on the base. This will keep the camera base flush to the wall / ceiling.

- 2 Adjust the position and angle of the camera until the desired view is set:

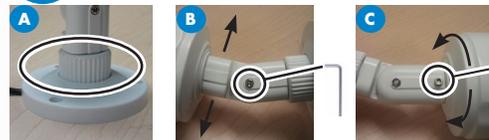

A Turn the adjustment ring to tighten / loosen the stand connection. Adjust the camera's horizontal position.

B Loosen lower screw with the included Allen key to adjust the camera's vertical position.

C Loosen upper screw with the included Allen key to rotate the camera housing.

- 3 Screw the antenna to the back of the camera.
- 4 Connect the camera power adapter to the camera. Connect power adapter to a 120V AC power outlet.
- 5 Remove protective film from the camera lens.

B. Connecting to a DVR


- 1 Screw the antenna to the back of the receiver.
- 2 Connect the RCA-to-BNC adapter (included) to the yellow video cable. Connect the yellow video cable to a BNC video input on your recording device.



ATTENTION: The audio input number or name should match the video input where you connect the video input (e.g. Video Input 1 and Audio Input 1).

- 4 Connect the receiver's power cable to the power adapter. Plug the power adapter into a power outlet or surge protector.

- 3 Connect the white audio input cable to an audio input on your recording device.

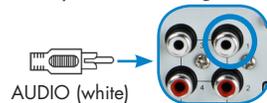


- 5 **OPTIONAL:** Use the double-sided tape to securely attach the receiver to a flat surface.

OPTIONAL: Connecting to a Television

Connect the yellow video input cable to a video input on your television. Connect the white audio input cable to an audio input on your television.

ATTENTION: The audio input number or name should match the video input where you connect the video input (e.g. Video Input 1 and Audio Input 1).

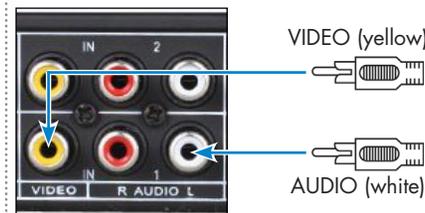

Installing Multiple Wireless Cameras



When installing multiple digital wireless security cameras in the same environment, maintain at least 2ft / 0.6m between the receivers to optimize camera performance.

NOTE: It is not recommended to install more than 4 digital wireless security cameras in the same environment to maintain optimal video frame rate performance.

**Need to extend the wireless range?
See instruction manual for further details.**

**REGISTER NOW TO RECEIVE
3-MONTHS EXTENDED WARRANTY**

www.lorextechnology.com/warranty

It's all on the Web

For detailed setup information, please refer to your Instruction Manual. For additional information and accessory purchases, please visit our website.

www.lorextechnology.com/support

