

720P WIRELESS DIGITAL SECURITY CAMERA SYSTEM

LWU3624 / LWU3622

QUICK START GUIDE

Getting Started



This system comes with the following components:

- 4x wireless 720p indoor/outdoor cameras*
- 4x antennas for cameras (pre-attached)*
- 4x power adapters for cameras*
- 4x mounting kits for cameras*

- 1x wireless indoor/outdoor receiver
- 2x antennas for receiver (pre-attached)
- 1x mounting kit for receiver
- 1x double-sided tape for receiver

*Quantity only applies to the LWU3624.
The LWU3622 contains 2 units of each.


NOTE: The LWU3624/LWU3622 is only compatible with the LH050.

Installation Tips

- Before you permanently install your cameras:
 - Plan where and how they will be positioned.
 - Determine where you will route the cable that connects the camera to the power adapter.
 - Verify the camera's performance by observing the image on a monitor when the camera is positioned where it will be permanently installed.
- Avoid installing cameras in locations that require the wireless signal to pass through cement, concrete and metal structures. This will reduce the transmission range.

A. Installing the Cameras


- 1 Mount the camera to the wall or ceiling using the included screws.

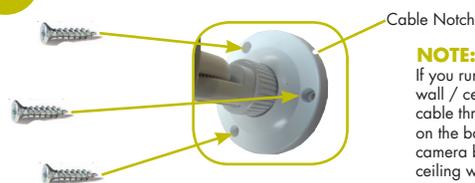


NOTE:
If you run the cables along the wall / ceiling, you must run the cable through the cable notch on the base. This will keep the camera base flush to the wall / ceiling when mounted.

! For outdoor use, installation in a sheltered location is recommended.

- 2 Adjust the angle of the camera until the desired view is set. Tighten the thumbscrew and the adjustment rings to secure the camera position.

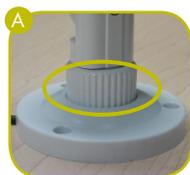

A) Turn the adjustment ring to tighten / loosen the stand connection. Adjust the camera's horizontal position.

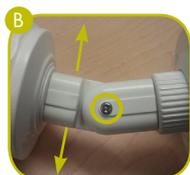

B) Loosen lower screw with the Allen key to adjust the camera's vertical position.



C) Loosen upper screw with the Allen key to rotate the camera housing.

- 3 Connect the camera power adapter to the camera. Connect power adapter to a power outlet.




NOTE: Power cables are only weatherproof when fully inserted at the connection point. Power cables are not to be submerged in water. Camera extension cables are available on www.lorextechnology.com.

B. Installing the Receiver

- 1 **OPTIONAL**
Use the included double-sided tape to securely attach the receiver to a flat surface.
OR
Use the included screws to mount the receiver to a wall.

ATTENTION: Make sure to first connect and power on the cameras before powering on the receiver. This will ensure a proper connection.

- 2 Plug the USB cable from the wireless receiver into your DVR.

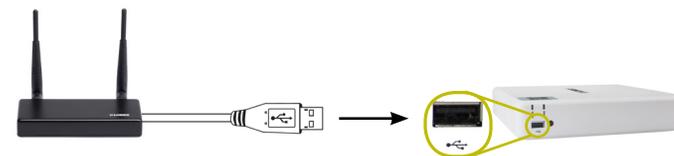

NOTE: It is not recommended to install more than 4 digital wireless security cameras in the same environment to maintain optimal video frame rate performance.

**Need to extend the wireless range?
Visit www.lorextechnology.com
for further details.**

**FOR SUPPORT AND INFORMATION,
VISIT WWW.LOREXTECHNOLOGY.COM**