

1080P WIRELESS DIGITAL SECURITY CAMERA SYSTEM

LWU3720 SERIES

Quick Start Guide

Getting Started



The LWU3724 system comes with the following components:

- 4x wireless 1080p indoor/outdoor cameras*
- 4x antennas for cameras (pre-attached)*
- 4x power adapters for cameras*
- 4x mounting kits for cameras*

- 1x wireless indoor/outdoor receiver
- 2x antennas for receiver (pre-attached)
- 1x mounting kit for receiver
- 1x double-sided tape for receiver
- *Quantity only applies to the LWU3724.

NOTE: The LWU3724 is compatible with Lorex LH060 series DVRs only.

Visit www.lorextechnology.com for the most up-to-date list of compatible recorders.


Installation Tips

Before you permanently install your cameras:

- Plan where and how they will be positioned.
- Determine where you will route the cable that connects the camera to the power adapter.
- Verify the camera's performance by observing the image on a monitor when the camera is positioned where it will be permanently installed.
- Avoid installing cameras in locations that require the wireless signal to pass through cement, concrete and metal structures. This will reduce the transmission range.

A. Installing the Cameras


- 1 Mount the camera to the wall or ceiling using the included screws and drywall anchors (optional).

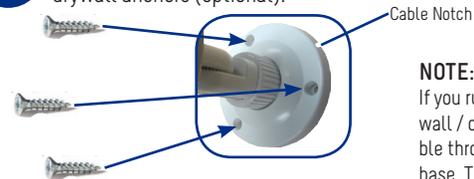

NOTE:
If you run the cables along the wall / ceiling, you must run the cable through the cable notch on the base. This will keep the camera base flush to the wall / ceiling when mounted.

! For outdoor use, installation in a sheltered location is recommended.

- 2 Adjust the angle of the camera until the desired view is set. Tighten the lower / upper screws and the adjustment ring to secure the camera position.

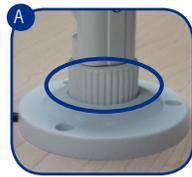

A) Turn the adjustment ring to tighten / loosen the stand connection. Adjust the camera's horizontal position.



B) Loosen lower screw with the included Allen key to adjust the camera's vertical position.



C) Loosen upper screw with the included Allen key to rotate the camera housing.

- 3 Connect the camera power adapter to the camera. Connect power adapter to a power outlet.



NOTE: Number of cameras and accessories may vary by model. Check your package label for specific content information.

B. Installing the Receiver


- 1 **OPTIONAL**
Use the included double-sided tape to securely attach the receiver to a flat surface.

OR

Use the included screws to mount the receiver to a wall.

ATTENTION: Make sure to first connect and power on the cameras before powering on the receiver. This will ensure a proper connection.

- 2 Plug the USB cable from the wireless receiver into your DVR.

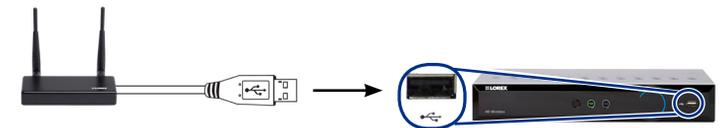

NOTE: For optimal video frame rate performance, we recommend you do not install more than 4 digital wireless security cameras in the same environment.

Need Help?

Visit us online for up-to-date software and complete instruction manuals

- 1 Go to www.lorextechnology.com
- 2 Search the model number of your product
- 3 Click on your product in the search results
- 4 Click the **Downloads** tab