HOME SENTINEL

Model **CA 1040**

VIDEO SURVEILLANCE SYSTEM

Weatherproof B/W Bullet Camera

Introduction:
The 'Home Sentinel" Weatherproof B/W Bullet camera has been specifically designed to meet the high quality standards of the Home Sentinel family of products. The CA 1040 is ideal for use in locations requiring discrete video surveillance.

Camera can be used with any TV set or Home Sentinel Video security monitor (6 pin Din)

Plug n' play connection to any Home Sentinel video security monitor using the adapter cable

Auto-iris lens and auto-focus lens compensate for changing lighting conditions and varying distances

Wide angle lens is ideal for indoor or outdoor video surveillance applications

Safety Instructions:
1. To reduce the risk of fire or electric shock, do not expose this system to excessive rain or moisture
2. Do not use the CA 1040 near any flammable liquids such as oil, propane or natural gas
3. Keep the CA 1040 away from any heat sources such as a radiator, heating fan, or a stove
4. The AC adapter may become hot after prolonged use. Make sure that there is at least 12 inches between the AC adapter and any flammable materials, such as curtains or papers
5. Do not attempt to repair any part of the system. If it requires repair, please phone 1-800-268-9852 (toll free) or for international calls, (905) 475-8444.

Contents of Package
Before using the unit, unpack the CA 1040 system, and inspect the contents. The following components should be present:
(1) Weatherproof Black & White Bullet Camera
(1) 65 ft cable and camera mounting stand
(1) Power Supply
(1) DIN-RCA cable adapter

Identifying the Parts
1. **CCD Camera Lens**
   Delivers a clear detailed picture to the TV set Or monitor
2. **RCA cable**
   65 ft cable to connect to the camera
3. **AC Adapter**
   Connect the AC adapter to the RED power cable on the camera and plug into wall outlet
4. **Adapter Cable**
   Use this DIN-RCA cable when using a Home Sentinel Monitor
5. **Camera Mounting Bracket**
   Comes with 3 screws for mounting, and a swivel bracket For the camera

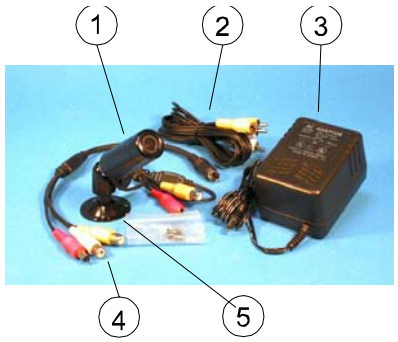

Operation with a TV

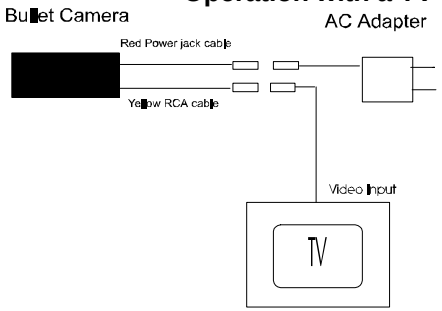

Operation with a Video Surveillance Monitor

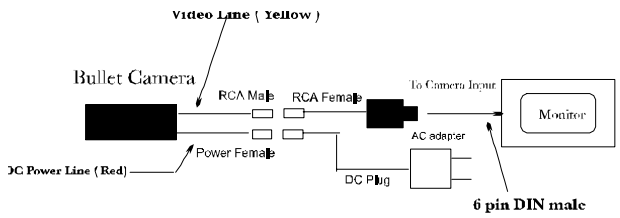

Installation

Connection to a TV
1. Connect the Yellow RCA cable from the bullet camera to the Video input on your TV set.
2. Make sure that your TV is selected to view a signal connected to the "Auxiliary A/V" or Line Input". Most TV's have a function on the remote control or front panel to select "TV, CATV or Auxiliary". Consult the Owner's Manual for your TV for programming.
3. Connect the RED Power jack cable from the bullet camera to the connector on the AC adapter, and plug in unit
4. Mount the pedestal stand on the wall or ceiling using the 3 screws provided, and then mount the camera on the bracket

Connection to a Video Surveillance Monitor
1. Connect the Yellow RCA cable from the bullet camera to the DIN-RCA cable adapter. Connect the other end of this cable (6 pin din) to the camera input on the back of the surveillance monitor
2. Connect the RED Power jack cable from the bullet camera to the connector on the AC adapter, and plug in unit
3. Mount the pedestal stand on the wall or ceiling using the 3 screws provided, and then mount the camera on the bracket

Specifications

Image Sensor:	1/3" B/W CCD
Picture Elements:	270,000 pixels
Usable Illumination:	1.0 lux
Shutter:	1/60 ~ 1/100,000 seconds
Lens Type:	3.7 mm fixed
Viewing Angle:	70 degrees
Gain Control:	AGC
Power Supply:	12VDC, regulated,100 mA
Operating Temperature:	-10°C ~ +55°C
Dimensions:	22 x 60 mm

Warranty : Located on the reverse side

Distributed By:
MANSOOR ELECTRONICS LTD
310 Alden Road, Markham, Ontario, Canada L3R 4C1
Tel: (905) 475-8444 Fax: (905) 475-3576
Toll Free: 1-800-268-9852
www.mansoorelectronics.com

Warranty

Home Sentinel® warrants this home and small business security product ('The Product') to be free from defects in material and workmanship for a period of one year from the date of original purchase. This warranty does not cover any expenses incurred in the removal or reinstallation of the product. This warranty is offered to the original purchaser of the product only.
If the product should prove defective within the warranty period, return the product postage prepaid to Home Sentinel®, along with your dated sales slip or other proof of purchase which will establish your eligibility for warranty.

Home Sentinel® will at its option, replace or repair the product free of charge and return the product to you postage prepaid. This warranty does not apply to the product which has been damaged, misused, altered or repaired by anyone other than a Home Sentinel® authorized service facility.

ANY IMPLIED WARRANTIES INCLUDING FITNESS FOR USE AND MERCHANTABILITY ARE LIMITED IN DURATION TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE, AND NO PERSON IS AUTHORIZED TO ASSUME FOR HOME SENTINEL® ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT. HOME SENTINEL® EXPRESSLY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES CAUSED BY THE PRODUCT. THE REMEDIES PROVIDED UNDER THIS WARRANTY ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS.

This warranty gives legal rights, and may also have other rights which vary from state to state or province to province. Some states/provinces do not allow limitations on how long a warranty lasts, so the above limitation may not apply to you. Additionally, some states/provinces do not allow the exclusion or limitation of consequential or incidental damages, so the above limitation or exclusion may not apply to you.