


Quick Setup Guide

Physical setup of recorder and essential system settings



N843 Series


Package Contents

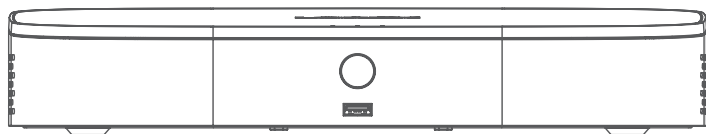


4K Ultra HD Security NVR




Power Adapter

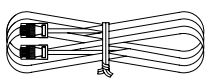

Ethernet Cable

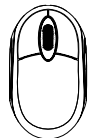


USB Mouse

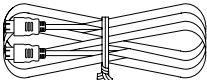


HDMI Cable

Dimensions

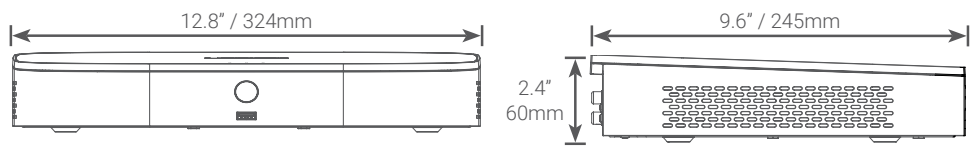

Setting Up Your Recorder

See the steps below (expanded instructions to the right) to complete initial setup of the recorder:

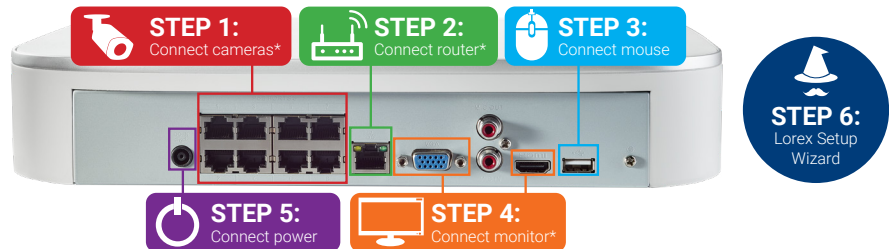

For camera compatibility information, visit lorex.com/compatibility.

* Not included / sold separately.

Overview of extra ports:



Audio In/Out
Connect microphone / speaker*

NOTE: For full instructions on using the extra ports, please refer to your security recorder's instruction manual at lorex.com.

Need Help?

Visit us online for up-to-date software and complete instruction manuals

1

Visit lorex.com

2

Search for the model number of your product

3

Click on your product in the search results

4

Click on the **Downloads** tab




Back panels shown below are for illustration only. Your recorder's back panel may appear different, with all the same ports in different locations.




STEP 1: Connect cameras*

Test your cameras prior to selecting a permanent mounting location by temporarily connecting the cameras and cables to your NVR using one of the following 2 methods:

- a. Connect cameras directly to the recorder (recommended).

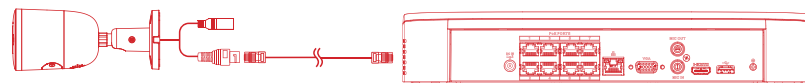

- b. Connect cameras to a PoE switch or router on your network (not included).

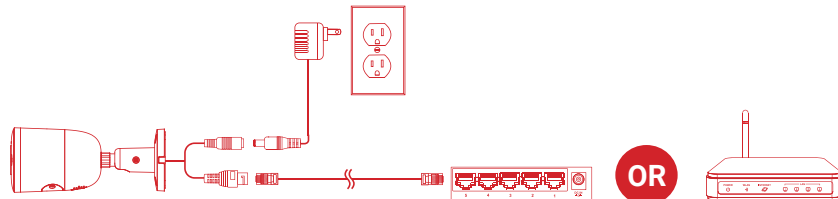


NOTES:

- It may take up to 1 minute for cameras to start up and transmit video to your recorder.
- This guide covers connecting IP cameras to your security recorder only. For full instructions on installing your cameras, please refer to your camera's documentation at lorex.com.
- Connecting cameras to a router, or a network switch without PoE, requires a power adapter for each camera. Refer to your camera's documentation at lorex.com for the correct power adapter model number.



STEP 2: Connect router*

Connect the recorder to your router using the included Ethernet cable.

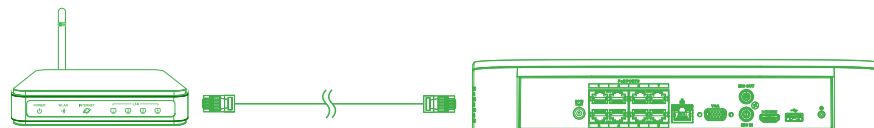


NOTES:

- If you are using a PoE switch, ensure the switch is connected to the same network as your recorder.
- To receive automatic firmware updates and enable remote viewing with mobile apps, a high speed Internet connection is required (minimum upload speed of 5Mbps required for 4K viewing; 3.5Mbps for lower resolutions). All other system features can be used without an Internet connection.




STEP 3: Connect mouse

Connect the included mouse to a USB port on the recorder.

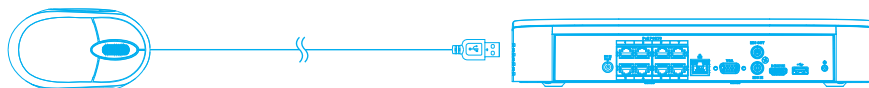

STEP 4: Connect monitor*

Connect the recorder to a monitor using the included HDMI cable or a VGA cable (not included). The HDMI port supports up to 4K resolution, and VGA supports up to 1080p.

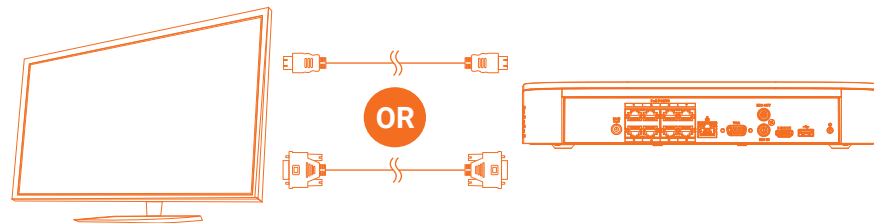

IMPORTANT: To optimize picture quality, set the recorder's video output to match the resolution of your monitor. See the section **Changing the Recorder's Output Resolution** on the rear for details.



STEP 5: Connect power


Use the included power adapter to connect the recorder to a nearby outlet.



STEP 6: Lorex Setup Wizard

When you first power up your recorder, the **Lorex Setup Wizard** will begin. The Wizard will help you configure core system settings.


You will also create a secure password. For future reference, it is recommended that you record your password here:

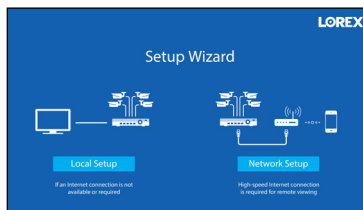

Record your password below and store in a secure place:

Lorex Fusion

Lorex Fusion supports connectivity with select wireless devices to the NVR. To learn more about fusion connectivity and which Lorex devices are compatible with this feature, visit lorex.com/pages/fusion.

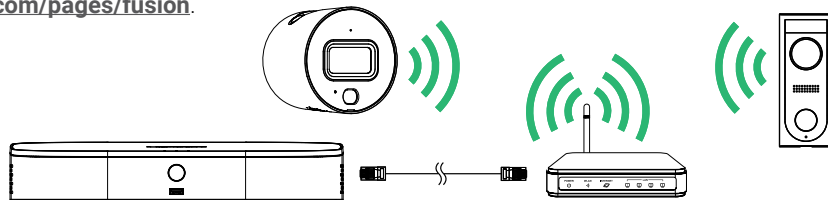

Reference: Quick Access to System Information

To quickly open a window that displays vital system information such as device ID, model number, firmware version, and IP address:

- Tap the button on the front panel of the recorder.


OR

- Right-click to open the Quick Menu and click **Info**.

Once you have completed all steps for initial setup on the front of this guide, please refer to the following sections to learn more about using your system.

Using the Mouse

- **During split-screen display mode:** Click an individual channel to view in full-screen. Click again to return to the split-screen display mode.
- **While navigating menus:** Click to open a menu option.

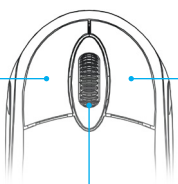

During live view: Use the scroll wheel to zoom in / out.

- **During live view:** Click anywhere on the screen to open the Quick Menu.
- **While navigating menus:** Click to exit menus.

NOTE: In live view, hover the mouse cursor over the top of the screen to open the Navigation Bar. Move the mouse cursor away from the top of the screen to close the Navigation Bar.

Using the Quick Menu

- 1. Main Menu
- 2. Playback
- 3. Smart Search
- 4. Pan/Tilt/Zoom
 - 5. View 1
 - 6. View 4
 - 7. View 8
 - 8. View 9
- 9. Camera Registration
- 10. Manual
- 11. Face Preview
- 12. AutoFocus
- 13. Camera Setting
- 14. Info
- 15. Sequence
- 16. Disable Beep

- Right-click anywhere on the live viewing screen to open the Quick Menu.
- Open Main Menu.
 - Search and play back recordings.
 - Filter through recorded video when searching.
 - Control PTZ cameras (not included).
 - Select camera/live display view.
 - Add IP cameras over the LAN.
 - Open manual recording controls.
 - Preview faces detected in Live View.*
 - Control auto focus cameras (not included).
 - Adjust camera color and image settings.
 - View system information.
 - Start/stop sequence mode.
 - Temporarily disable all current audible warnings.

* Compatible with select cameras only. Visit lorex.com/compatibility for details.

Adding Cameras from the LAN


Follow the steps below to add cameras that are not directly connected to the Power over Ethernet (PoE) ports on the back of the recorder.

NOTE: Please visit lorex.com/compatibility for a list of compatible Lorex IP cameras.

To add cameras from the LAN:

- Connect the camera to a router or switch on the same network as the recorder.
- Right-click and select **Camera**. If prompted, log in using the system user name (default: **admin**) and your new, secure password.
- Configure the following:

- Click **Camera Registration**.
- Check the camera(s) you would like to add.
- Click **Add**. The status indicator turns green to show the camera is successfully connected.
- The added device(s) will appear in the **Added Device** list. Right-click to exit to live view.

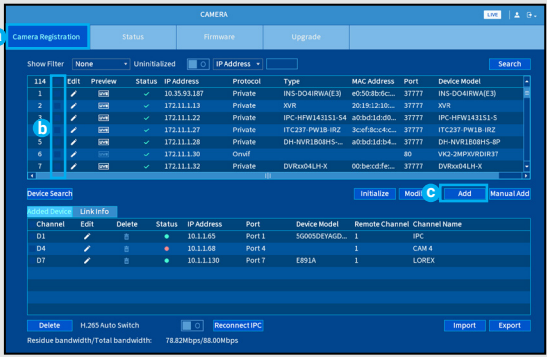


NOTE: If the icon in the Status column appears red, there may be a password issue with the camera. Select the camera and click **Reconnect IPC**.

Playback and Search

Search through and play video recordings from the hard drive.

To search for and play recordings:

- From live view, right-click and then click **Playback**. If prompted, log in using the system user name (default: **admin**) and your new, secure password.
- Configure the following:
 - Use the calendar on the right to select the date to playback.
 - Check channels you want to play back. Click the grey icon beside each selected channel to select **Mainstream (M)** or **Substream (S)** video quality.
 - Click inside the video bar to select the playback time. Playback starts immediately at the selected time.

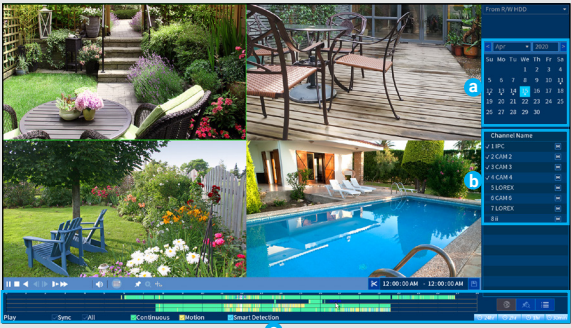


Backup

Back up recordings from the hard drive to a USB flash drive (not included).

To back up recordings:

- Insert a USB flash drive (not included) into a free USB port on the recorder.
- From live view, right-click and then click **Main Menu**. If prompted, log in using the system user name (default: **admin**) and your new, secure password.
- Select **BACKUP**.
- Configure the following:
 - Select the channel(s) to search by.
 - Select the type and quality of recordings to search for.
 - Select a **Start Time** and **End Time** for your search.
 - Choose a file format for your backed up files.
 - Click **Search** to see recordings that match your search.
 - Check boxes next to recordings you want to back up, then click **Backup**. You may also click **Onekey Backup** to back up all files that match your search.

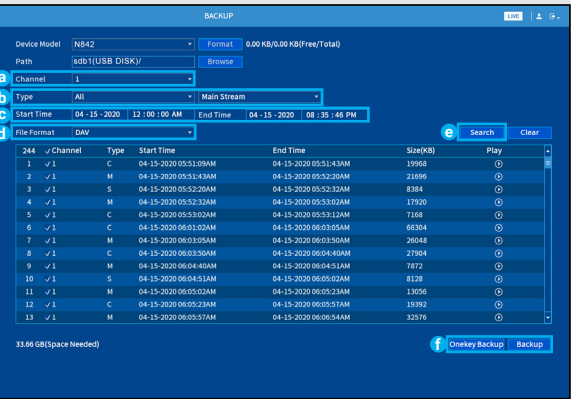


Smart Motion Detection & Deterrence Settings

Configure smart motion detection and/or active deterrence settings. For a complete list of compatible cameras, navigate to your recorder series at lorex.com/compatibility.

To configure smart motion detection or active deterrence:

- In live view, right-click and click **Main Menu**. If prompted, log in using the system user name (default: **admin**) and your new, secure password.
- Select **EVENTS**, then click **Motion** on the far left.
- In the **Smd/Deterrence** tab, configure the following:

Option 1: Smart Motion Detection Cameras

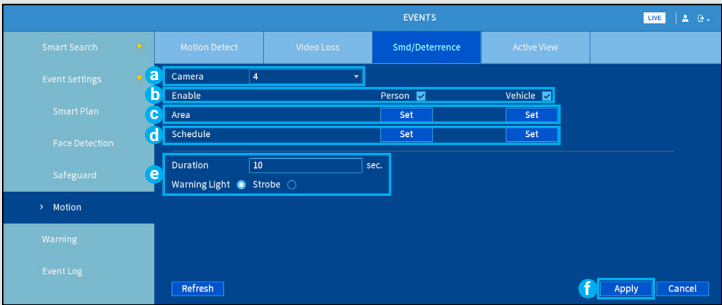

- Select the channel of a connected camera with person and vehicle detection.
- Check **Enable** underneath **Person** and/or **Vehicle**.
- Click **Set** next to **Area** to set active areas for person and/or vehicle detection. See **Figure 1** below for details.
- Click **Set** next to **Schedule** to set a weekly schedule for person and/or vehicle detection. See **Figure 2** below for details.
- Set preferences for the warning light and siren.
- Click **Apply**.



Figure 1: Detection Area

- Click **Add** to set an area for person or vehicle detection on the selected channel. Click-and-drag the corners to resize the area.
- For most accurate results, set an area where objects of interest will move within the bounding box as well as into / out of.
- Check **Light** next to a rule to flash the camera's warning light when an object is detected.
- See your camera's documentation for optimal camera positioning for person and vehicle detection.


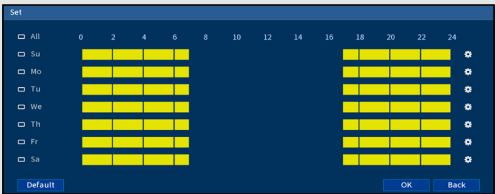


Figure 2: Schedule

- The default schedule, shown in **Figure 2**, is active during the night, between 5pm and 7am.
- Click **Set** to change the schedule for the corresponding day of the week.
- Click **OK** when finished.

Option 2: Active Deterrence Cameras

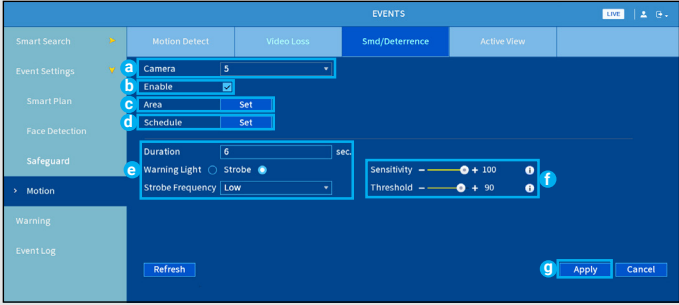

- Select the channel of a connected deterrence camera.
- Check **Enable**.
- Click **Set** next to **Area** to set active areas for person and/or vehicle detection. See **Figure 3** below for details.
- Click **Set** next to **Schedule** to set a weekly schedule for person and/or vehicle detection. See **Figure 2** above for details.
- Set preferences for the warning light and siren.
- Set **Sensitivity** and **Threshold** levels to your preference.
- Click **Apply**.



Figure 3: Deterrence Area

- The camera image appears with a grid overlay. The green area is the active area for deterrence.
- Click or click-and-drag to add / remove boxes from the active area.
- In **Figure 3**, only motion around the doorway will trigger the warning light.
- Right-click when finished.



To set off all connected deterrence cameras' warning lights and sirens, press and hold the front panel button for 3 seconds.



Changing the Recorder's Output Resolution

To ensure the best possible picture quality, set the recorder's output resolution to match the highest resolution supported by your monitor.



IMPORTANT: If you need to switch the monitor, make sure you set the recorder to an output resolution supported by the new monitor before switching.

To change the recorder's output resolution:

- From live view, right-click and then click **Main Menu**. If prompted, log in using the system user name (default: **admin**) and your new, secure password.
- Click **Display**, then configure the following:
 - Set **Resolution** to match the highest resolution supported by your monitor. For example, select **3840x2160** for 4K monitors, or **1920x1080** for 1080p.
 - Click **Apply**. The recorder will restart before changes take effect.

